


Hardware Provided



Step 1- Insert screw into open end of plastic washer




Step 2- Place end of screw with washer through hole in sign




Step 3- Hand tighten screw while holding sign flush with surface. **Do not over tighten.** Over tightening can result in damage to the slate and siding.




Step 4 - Snap cap on over washer provided

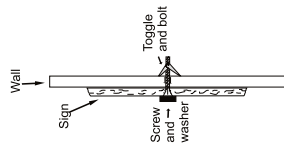

For hollow walls toggle bolts are required.

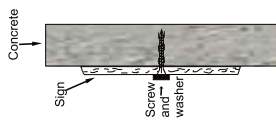

For Masonry application you require masonry expansion screws.

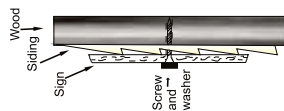

Screws provided are for wood application only.

Signage Mounting Instructions



For Further Information
Contact

1-888-786-2171

www.imagesinslate.com